



UNIVERSAL CLEANING INJECTOR SEAT SET



- Kit to be used for removing the combustion residues that remain in the injectors seat without any damages.
- For cleaning and maintaining the injector shaft.



INCLUDED:

Lubricating grease to be used with threaded bars, nuts etc...

1 Pipe cleaners for cleaning the headquarters of injector sprayer.



2 Sealing plugs for the injector housing.



3 Clening brush for seal seat.




4 Special cleaning brushes for injector seat.



5 Cutters for cleaning the sealing seat.



6 Final finishing with cotton pad.

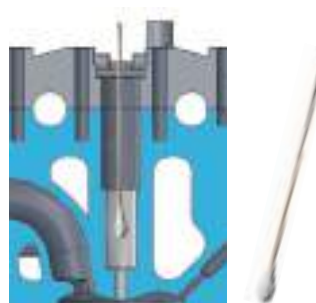

GO	CODE	415
1	with 26 pcs.	kg 4 kg