 


G DIESEL INJECTOR SEAL EXTRACTOR TRUCK, Ø10 MM

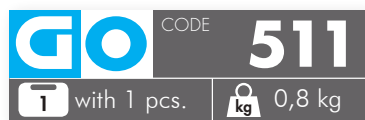

Technical data

- For washers with holes Ø10 mm.
- Operation with a striking hammer of 0,5 kg.



 
- Tool for the removal of the copper washer (placed on the bottom of the injector seat) post removal of diesel injectors.
- For easily and safely removal of copper washers glued on the bottom of the injector seat.

G DIESEL INJECTOR SEAL EXTRACTOR COMMERCIAL VEHICLE, CARS, Ø7 MM



Technical data

- For washers with holes Ø7 mm.
- Operation with a striking hammer of 0,5 kg.

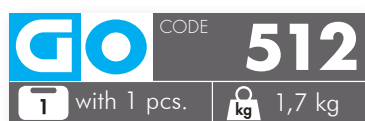


- With this extractor is possible to remove copper sealing without damaging the cylinder head.
- Equipped with a performing slide hammer.

G DIESEL INJECTOR SEAL EXTRACTOR COMMERCIAL VEHICLE, CARS, Ø7 MM



Technical data

 - Operation with a striking hammer of 1,5 kg.



- It includes a slide hammer for removal of diesel injector washers.
- For easily and safely removal of copper washers glued on the bottom of the injector seat.