

CRANKSHAFT PULLEY PULLER FORD TRANSIT 2.0 TDCI



- The kit allows you to remove the anti-vibration pulley on Ford 2.0 Eco Blue engines without damaging the rubber components.
- The peculiarity of this engine is that the toothed belt runs in the area of the engine in oil bath.

GO CODE **827**
1 with 7 pcs. 1 kg

FORD ENGINE BRACKET SCREW SOCKET



Application				
FORD	Transit Custom	2012	2.0L EcoBlue	303-1694
	Mondeo	2014		
	Galaxy	2015		
	S-Max	2015		
	Edge	2016		
	Focus	2019		
	Kuga	2019		


- To remove/install the front engine mount in a 2.0L EcoBlue diesel - 1/2" drive. By using the special tool, you ensure that the screw can be loosened and tightened professionally.

GO CODE **687**
1 with 1 pcs. 0,16 kg

PULLER FOR INJECTION PUMP BMW



Application
N47, N57
OEM code: 11 8 030; 11 8 740

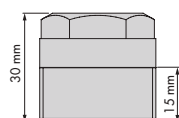

GO CODE **858**
1 with 1 pcs. 0,1 kg

SPECIAL SOCKET FOR START/STOP CAPACITORS **NEW**



Application

Petrol, diesel and hybrid vehicles with Start/Stop system

Citroën	Berlingo, C3, C4, C5
Opel	Grandland, Vivaro
Peugeot	5008, Partner (Kasten/Tepee, 508 SVV

- This 1/2" drive socket has been specially designed for the cable nut on the Start/Stop capacitors fitted to PSA vehicles.
- The high-current terminals of these capacitors (e.g. OEM No. 98 017 393 8) are fitted with a tamper-resistant round nut featuring three flat sides, which cannot be removed using a standard socket.

- TO BE USED AS OEM-PSA GE-52531, GE52531, J-1288-A

GO CODE **373**
1 with 1 pcs. 0,1 kg

TIMING SUPPLEMENTARY KIT FOR VANOS UNIT, BMW - FORD



SOCKET 1/2" 16-POINT 30MM


Application

BMW	B36; B38; B46; B48; B58 (01/2017-)
MINI	B36 (1.5L); B38 (1.2 and 1.5L); B48 (2.0L)
FORD	C-MAX; Fiesta VII; Focus IV; Puma; Tourneo; Transit Connect
	M1DA; M1DC; M1DD; M1DH; M2DA; M2DB; M2DC; SFDB

- The tool is required for removing and installing the central valve of the camshaft control unit (VANOS).
- Ideally suited as a supplement to **GO771**


GO CODE **776**
1 with 1 pcs. 0,11 kg

HIGH PRESSURE PUMP EXTRACTOR HYUNDAI, KIA

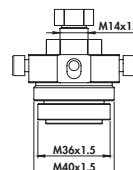

- The tool is used to remove the high pressure pump.
- TO BE USED AS OEM 09331-1M100.

Application
Hyundai and Kia CRDi
- diesel engines chain 2.0 and 2.2L

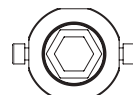

GO CODE **811**
1 with 1 pcs. 0,4 kg