



UNIVERSAL GLOW PLUG TIP EXTRACTION SET M8X1 M9X1 M10X1 M10X1.25



Solution 1

Pulling out with slide hammer



Solution 2

Pulling out with bearing threaded extractor



- Set of tools for the extraction of the electrode terminal part of the glow plugs (M8, M9, M10) in the event of breakage or sticking inside the seat port, which is otherwise impossible to remove. The set includes all the tools needed to safely remove the terminal part of the glow plug electrode without damaging the cylinder head. This operation becomes very simple, safe and fast.
- It allows to operate in two different ways:


1 Extraction with slide hammer

2 Extraction with threaded extractor



PLUS:

Developed and reinforced for glow plug with ceramic bulb

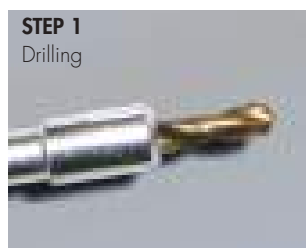

GO CODE **451**
1 with 20 pcs. **kg** 2,5 kg
§ **PATENTED**



Removing the glow plug tip when the breakage happens inside the AREA **A**

Minimum external diameter electrode tip: Ø4.3
Maximum diameter internal pierce: Ø3